
# **SPEEDY PRESS**

## **PORTABLE PRESS FOR COMPOUND BOWS**

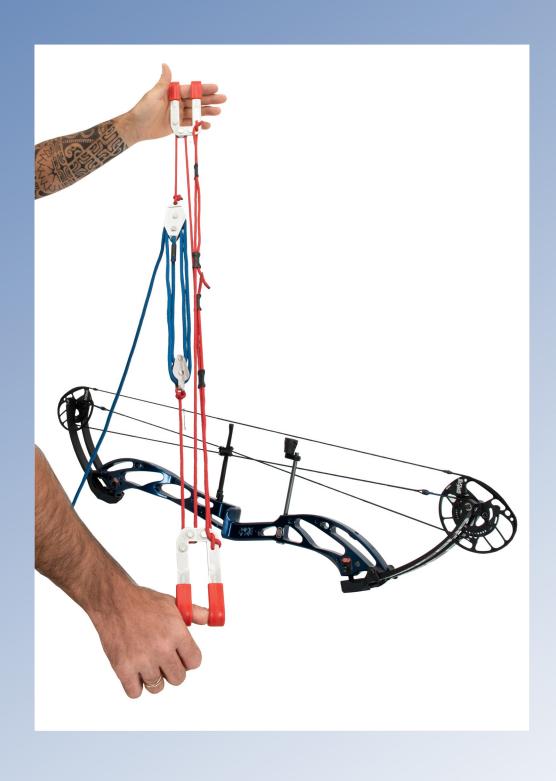


Step 1

Deploy the bow press and make sure that there are no knots in the rope.



#### Step 2

Put the brackets on the limbs and adjust the red rope size to have more adjustability on the blue rope.

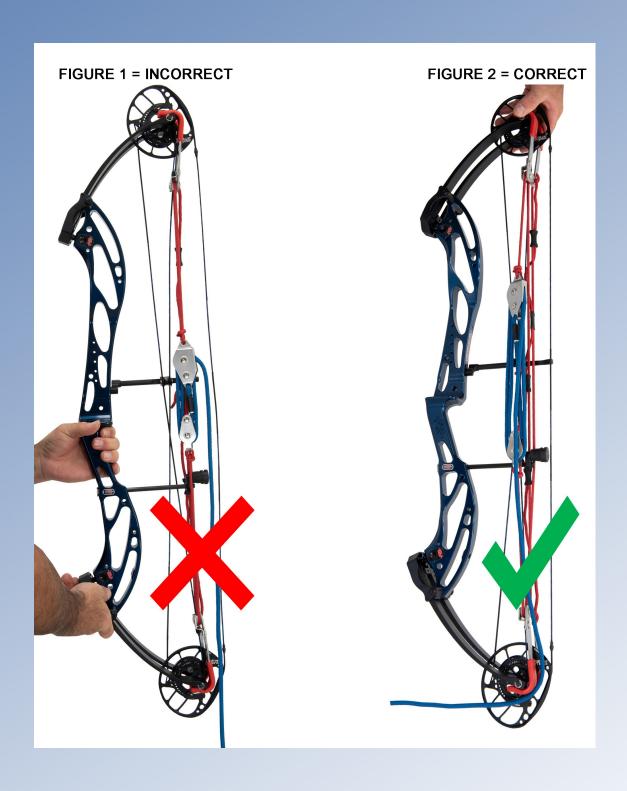

As the red rope has not been adjusted in Figure 1, it will be impossible to press the bow as the blue rope needs more length as shown in Figure 2.

Step 3

Pull the blue rope to loosen the bowstrings.



Step 4

Anchor the blue rope out sideways and lock it in place to keep the bow pressed as shown in the photograph.



Step 5
You can now carefully remove cables and strings and make all necessary adjustments.



### Step 6

After checking that brackets, strings and cables are in the correct position, remove the blue rope from the anchored position and slowly release until the press is in the relaxed position.



#### Step 7

Make sure that all ropes from the press are loose before removing it from your bow.



#### **WARNING!**

- 1. Do not disassemble or alter the press in any way as it may cause damage.
  - 2. Keep the press clean and free of dirt and excess heat. Store in its case in a dry area.
- 3. Always handle with extreme caution when the bow is under pressure, especially when releasing the blue rope. Do NOT over tighten.

Thank you for choosing Avalon!

Visit archersgear.com

for further information.



